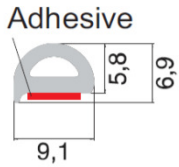
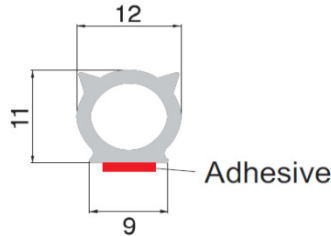


Adhesive sponge rubber profiles


We suggest you a compression not higher than 50%, otherwise we can not assure you that the bulb will go back into the original position.




PA7300146-000
EPDM



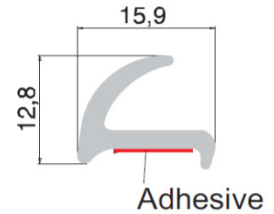
PA7300144-000
EPDM




PA7300143-000
EPDM

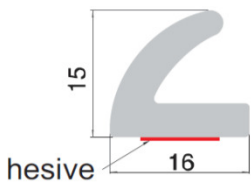


PA7300123-000
EPDM

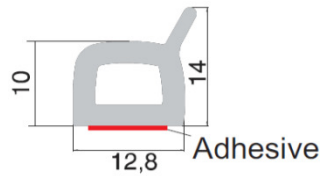


PA7300116-000
EPDM

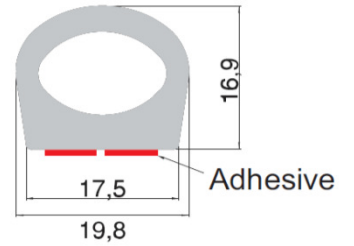













PA7300125-000
EPDM

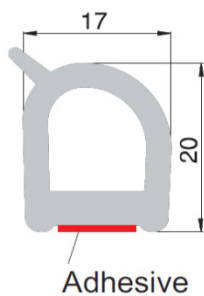

PA7300211-000
EPDM

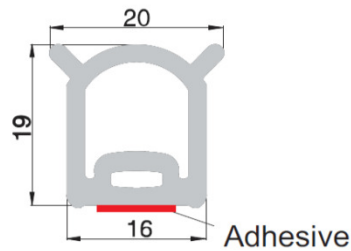

PA7300210-000
EPDM

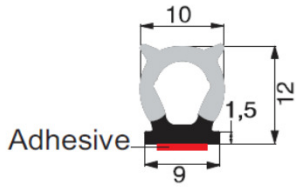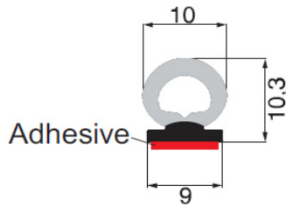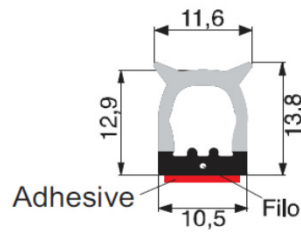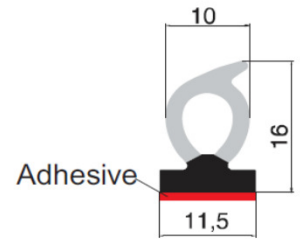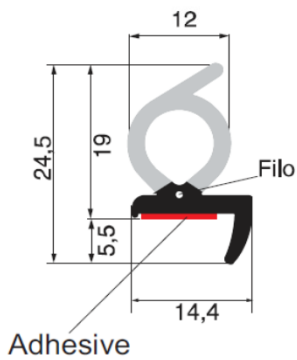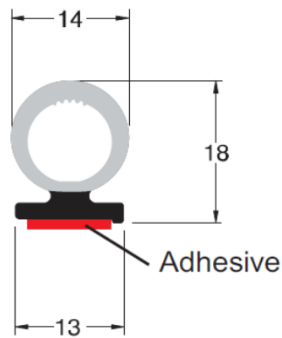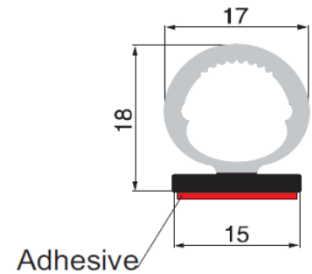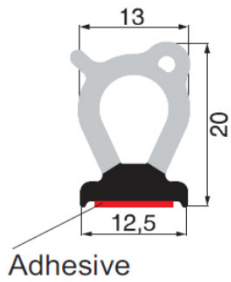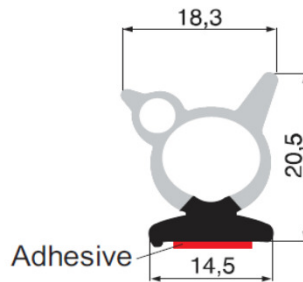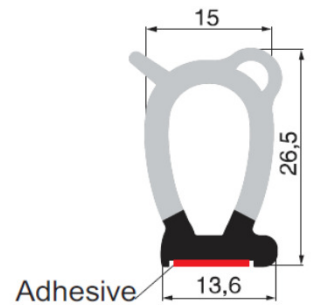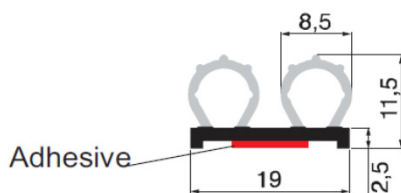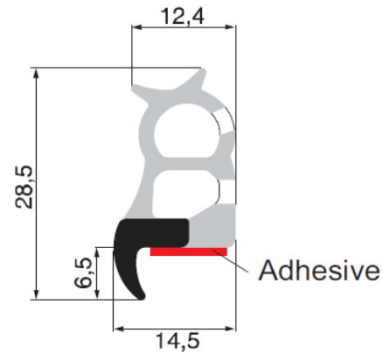Co-extrusion profiles with Adhesive

**PA7101960-000
EPDM**

**PA7101944-000
EPDM**

**PA7101964-000
EPDM**

**PA7101039-000
EPDM**

**PA7101805-000
EPDM**

**PA7101536-000
EPDM**

**PA7101951-000
EPDM**

**PA7101910-000
EPDM**

**PA7101933-000
EPDM**

**PA7101909-000
EPDM**

**PA7101911-000
EPDM**

**PA7101758-000
EPDM**